



LOUVERED ROOF CARE GUIDE

 




SUNCOAST
ENCLOSURES™

Louvered Roof Care Guide

Congratulations on your new Louvered Roof! We are proud to have been able to help expand your outdoor living space. Below are details and instructions on how to care for, use, and maintain your Louvered Roof.



 

 
How To Operate Your Louvered Roof:

- Select the desired channel(s). The red LED light will illuminate when the channels are selected.
- To open the Louvered Roof, press 
- To close the Louvered Roof, press 
- Stop the louvers at any point by pressing 

How to Clean Your Louvered Roof:

- The Aluminum components of the structure have been powder coated to provide a durable finish and exceptional colour. You may wash them by hand with a microfiber cloth, soap, and water. You can also use a hose, or use a pressure washer.
- Access the tops of the blades for cleaning by opening the louvers all the way. Remember to protect or move your patio furniture while cleaning.
- Gutters are mounted on the inside of the Louver frame and can be cleaned out with a shop vac or by hand.

Setting an Intermediate Open Position:

- How to program PRESET or Intermediate Position.
- Select the channel on the remote that corresponds to the louver section that you would like to set the preset for (Presets can only be set one channel at a time).
- Direct the Louvered Roof to the position you want using   
- Select the channel, then press and hold   simultaneously (about 10 seconds) until the louver jogs open and closed.
- Your preset has been programmed! To use, simply select the desired channels and select PRESET, the louvers will automatically open or close to the Intermediate Positions that you have set up.
- NOTE: Each louver section will only remember the PRESET that was last programmed for it.

Need to contact us?

Contact our office

Phone: 1.887.449.5106

Email: info@suncoastenclosures.com

Or contact your sales representative

Warranty

Suncoast Enclosures guarantees all workmanship for 1 year from the date of completion. Warranty shall cover all mechanical/moving parts, including but not limited to retractable screen motors, louver motors, and doors/hinges for 5 years. Warranty shall cover all screens, both fixed and retractable for 5 years, vinyl windows for 5 years, and retractable vinyl screens for 1 year. Suncoast Enclosures will not be responsible for maintenance, misuse, or acts of nature excluding the weight of snow. Warranty shall cover all aluminum materials and polycarbonate roofing for 10 years. Warranty becomes void if work is performed on said job by persons other than agents of Suncoast Enclosures. Defective workmanship must be reported in writing within one year from the date of the final invoice issued by Suncoast Enclosures.



SUNCOAST
ENCLOSURES™