



# RETRACTABLE VINYL CARE GUIDE



**SUNCOAST**  
ENCLOSURES™



# Retractable Vinyl Care Guide




Congratulations on your new Retractable Vinyls! We are proud to have been able to help expand your outdoor living space. Below are details and instructions on how to care for, use, and maintain your Retractable Vinyls.

## **Retractable Vinyl Screens should always be monitored during operation.**

Objects left under a vinyl screen and/or high winds can prevent the screen from lowering properly. Your screen is fitted with a safety feature to prevent damage. Please do not operate your vinyl screens in strong winds. If already in the lowered position, your screens can withstand quite extreme winds as well as snow and freezing rain. If you must operate your Retractable Vinyl Screens in high winds, you may need to manually assist them.

We recommend leaving your Vinyl Screens down as the weather gets cold. This is to allow for natural shrinkage of the Vinyl to happen within the track system. The tracks will pull it back into place once the temperature warms up.

 
 
 

 
## **How To Operate Your Retractable Vinyls:**

- Select the desired channel(s). The red LED light will illuminate when the channels are selected.
- To raise the vinyls, press 
- To lower the vinyls, press 
- Stop the vinyls at any point by pressing 

## **How to Clean Your Retractable Vinyls:**

- The Aluminum components of the structure have been powder coated to provide a durable finish and exceptional colour. You may wash them by hand with a microfiber cloth, soap, and water. You can also use a hose, or use a pressure washer.
- Follow directions and instructions found on IMAR Strataglass Protective Cleaner for clear vinyl. Use this product.
- DO NOT use Rain-X, Pledge, Plexus, Windex, or Bleach.

## **Setting a Preset Screen Height:**

- If you like to set your screens to a preset height this tip is for you!
- How to program PRESET or Intermediate Position Set up.
- Select the channel on the remote that corresponds to the screen that you would like to set the preset for (Presets can only be set one channel at a time).
- Direct the screen to the position you want using   
- Select the channel then press and hold   simultaneously (about 10 seconds) until the screen jogs up and down.
- Your preset has been programmed! To use, simply select the desired channels and select PRESET, the screens will automatically open or close to the Intermediate Positions that you have set up.
- NOTE: Each screen will only remember the PRESET that was last programmed for it.

Need to contact us?

Contact our office

Phone: 1.887.449.5106

Email: [info@suncoastenclosures.com](mailto:info@suncoastenclosures.com)

Or contact your sales representative



## Warranty

Suncoast Enclosures guarantees all workmanship for 1 year from the date of completion. Warranty shall cover all mechanical/moving parts, including but not limited to retractable screen motors, louver motors, and doors/hinges for 5 years. Warranty shall cover all screens, both fixed and retractable for 5 years, vinyl windows for 5 years, and retractable vinyl screens for 1 year. Suncoast Enclosures will not be responsible for maintenance, misuse, or acts of nature excluding the weight of snow. Warranty shall cover all aluminum materials and polycarbonate roofing for 10 years. Warranty becomes void if work is performed on said job by persons other than agents of Suncoast Enclosures. Defective workmanship must be reported in writing within one year from the date of the final invoice issued by Suncoast Enclosures.



**SUNCOAST**  
ENCLOSURES™